


Castle Alarms and Electronics

Manufacturers and suppliers of intruder alarm equipment

North Street, Winkfield, Nr. Windsor, Berks, SL4 4SY

Telephone Winkfield Row (0344) 886446 (5 lines)

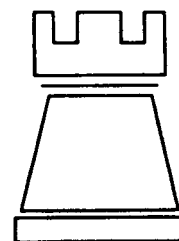

ZX 901 OPERATING INSTRUCTIONS

- 1 Ensure all doors/windows are securely closed
- 2 Turn control key to ON (select zone 1 or zone 1-2 as required)
- 3 ALL the circuit indicator LEDS should reset and extinguish (if any circuit LED remains On, switch control Off again or the Bell will ring after a short while).
- 4 The exit tone will now sound and continue for the timing period (adjusted by the variable resistor). Leave the building by the prescribed route, and ensure that the system buzzer stops after the final door is closed.
- 5 On re-entry, the prescribed entry route must be followed; and the control panel switched off as soon as possible—within the entry time set.
- 6 Personal Attack System will initiate a full alarm in ANY key position—including 'Off'—this is cancelled by turning the keyswitch to 'Off' (if necessary), resetting the personal attack button, and turning the keyswitch to 'On' and 'Off' again.

Tamper buzzer will sound as a result of interference with the alarm system, in **any** key position. The buzzer may be silenced by turning the keyswitch to 'On' and 'Off' again. The LED indication will remain lit until the fault is repaired.

- 8 If Bell Stop Timer is fitted, this will automatically switch off bells at a preset time after tripped (unless initiated by Personal Attack System).